

MONARCH INSTRUMENT Innovation in Instrumentation

NEMA6000

Enclosure for DC6000

Description

The NEMA6000 enclosure is made of strong molded fiberglass reinforced polyester and is well suited for high temperature and corrosive environments, and protects from dirt, dust, oil and water.


It comes with 304 stainless steel wall mounting feet with 10-32 stainless steel screws and internal back panel 10-32 threaded inserts for mounting additional internal user supplied hardware or wiring harnesses.

The enclosure can be easily drilled to accept conduit or gland fittings for input/output wiring and power.

The DataChart Paperless Recorder front bezel and display assembly are IP65 rated (splash proof). The NEMA6000/DC6000 combination is intended for indoor use only and is not waterproof.



Dimensions

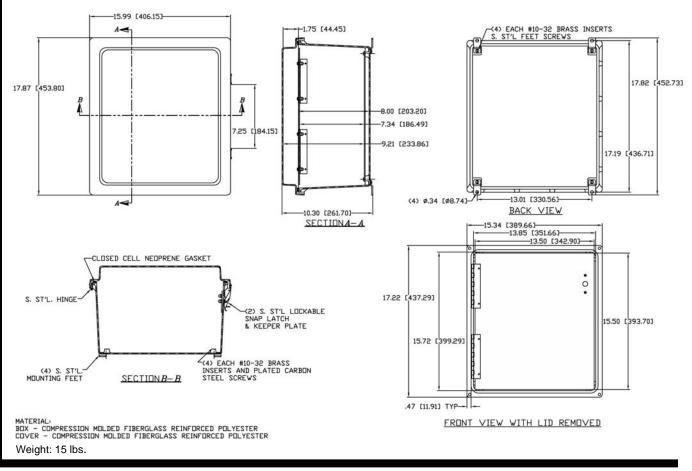

15 Columbia Drive, Amherst, NH 03031

Phone: 603-883-3390 Fax: 603-883-3390 www.monarchinstrument.com e-mail: sales@monarchinstrument.com