



DataChart® Temp 1000fp

Temperature Data Logger with 12" Flexible Probe

Features

- Temperature Range: -40°C to +150°C
- Probe Temperature Range: -85°C to +260°C
- Memory Size: 32,767 Readings
- Resolution: 0.05°C
- Programmable Start Time
- Reusable
- Ruggedized
- N.I.S.T. Traceable
- User Calibration through Software
- Calibration Date Stored in Memory
- No Programming Experience Necessary
- Real Time Operation
- Low Cost
- Quick Setup



Applications

- Implementing HACCP Programs
- Medical/Pharmaceutical
- Kiln Drying Studies
- Food Preparation and Processing
- Environmental Studies
- Well Monitoring
- Dish Washer Testing
- Hostile Environment Monitoring



Description

The Temp1000fp Temperature Logger is a waterproof, battery powered, stand-alone data logger used for automatically recording temperatures between -85°C and +260°C. It can be operated in a +150°C environment. It comes with a 150mm flexible stainless steel probe. The probe can be bent and repositioned for maximum flexibility and provides a fast response time. The Temp1000fp is a major leap forwarding cost and durability. This all-in-one compact, portable, easy to use device will measure and record up to 32,767 temperature measurements. Its real time clock ensures that all data is time and date stamped. The storage medium is non-volatile solid state memory, providing maximum data security even if the battery becomes discharged. Its small size allows it to fit almost anywhere. Data retrieval is simple. Plug it into an empty com port and our easy to use software does the rest.

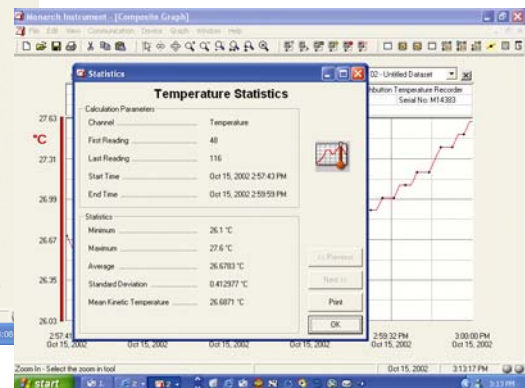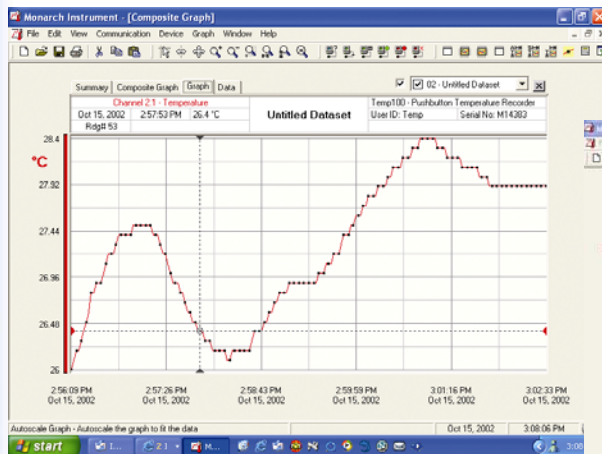

Specifications

Temp 1000fp Temperature Range: -40°C to +150°C

Probe Temperature Range: -85°C to +260°C

Temperature Accuracy: 0.5°C

Temperature Resolution: 0.05°C

Temperature Calibration: Digital calibration is available through software.

N.I.S.T. Traceable: N.I.S.T. certificates available

Calibration Date: Automatically recorded within device to alert user when calibration is required.

Recording Interval: 30/minute to 1/day selectable.

Start Time: Start time and date are programmable through software.

Real Time Recording: Device may be used with PC to monitor and record data in real time.

Memory: 32,767 temperature readings.

User-Replaceable Battery: 1 year typical.

Time Accuracy: ±1 min/month at 20°C

Data Format: Date and Time stamped, °C, °F, °K, °R.

Shock resistance: Drop proof to 5'.

Weight: 1 oz. (25.5g)

Computer Interface: RS232C Serial Port

Software: Windows®95/98/NT/2000/XP based software for complete control and operation.

Operating Environment: -40°C to + 100°C, 0% to 100% RH

Dimensions: 5.6" + probe x 1.25" dia (143mm + probe x 31.75mm)

Material: Stainless Steel

Software Features

The software used to operate the Temp1000fp requires no programming skills, enables users to effortlessly select reading rate, user ID and initiate the start of data collection within moments after user connects hardware. After retrieving the data, it may be viewed instantly in graphical or tabular form.

Zoom In/Out: Use mouse to click and drag to select area for zooming in or out.

Statistics: min, max, mean, mean kinetic temperature, standard deviation, sterilization (FO Units) & Pasteurization (PU units).

Cursor: Use mouse to click on graph to obtain specific data point information.

Programmable Start Time: Program start time and date through software.

Real Time Operation: Convert PC into strip chart recorder for real time data collection.

Annotating Data: All data points may be easily annotated.

Printing: Automatic printing of data in graphical or tabular form

Units: °C, °F, °K, °R.

User ID: Programmable through software and stored within device.

AutoScale: Autoscale function may be enabled or disabled by user.

Calibration: Automatic calibration in software and calibration parameters stored within device

Exporting Data: All data can be directly exported to Microsoft Excel® or to text format.

Graph Grid Size: Four options for grid size available.

ORDERING INFORMATION

<u>Item No.</u>	<u>Model</u>	<u>Description</u>
5399-0110	QuadTemp	4 Channel Thermocouple Based Temp. Data Logger
5399-9901	IFC101	9 Pin Computer Interface Cable Software & Manual
5399-9999	N.I.S.T. Cert.	N.I.S.T. Calibration Certificate

Ask About Our Other Data Loggers

Temperature	4.0 to 20.0 mA
Humidity	Pulse/Counter
Pressure	Submersible
pH	Level
Shock/Vibration	Multi-Parameter
Voltage	Intrinsically Safe
RF Transmitters	

